

# SFW05-AT

REPLACEMENT PARTS LIST • LISTA DE PARTES DE REPUESTA • LISTE DE PIÈCES DE RECHANGE

SFW05-AT

PART NO.	DESCRIPTION	DESCRIPCIÓN	BESCHREIBUNG	DÉSIGNATION
SFW05AT01-1	SCREW	TORNILLO	SCHRAUBE	VIS
SFW05AT02-1	EXHAUST COVER	CUBIERTA	ABDECKUNG	COUVERCLE
SFW05AT03-1	CYLINDER CAP	CILINDRO TAPA	ZYLINDER KAPPE	CYLINDRE BOUCHON
SFW05AT04-1	GASKET	SELLO	DICHTUNG	JOINT
SFW05AT05-1	SEAL	SELLO	DICHTUNG	JOINT
SFW05AT06-1	O-RING	SELLO	DICHTUNG	JOINT
SFW05AT07-1	SPRING	RESORTE	FEDER	RESSORT
SFW05AT08-1	O-RING	SELLO	DICHTUNG	JOINT
SFW05AT09-1	VALVE	VÁLVULA	VENTIL	VALVE
SFW05AT10-1	O-RING	SELLO	DICHTUNG	JOINT
SFW05AT11-1	COLLAR	COLLAÍN	KRAGEN	COLLET
SFW05AT12-1	O-RING	SELLO	DICHTUNG	JOINT
SFW05AT13-1	O-RING	SELLO	DICHTUNG	JOINT
SFW05AT14-1	PISTON ASSEMBLY	ASAMBLE DE PISTON	KOLBEN-ZUSAMMENBAU	ENSEMBLE PISTON-COUTEAU
SFW05AT15-1	O-RING	SELLO	DICHTUNG	JOINT
SFW05AT16-1	CYLINDER	CILINDRO	ZYLINDER	CYLINDRE
SFW05AT17-1	BUMPER	AMORTIGUADOR	PUFFER	AMORTISSEUR
SFW05AT18-1	JOINT GUIDE	CONJUNTO	GELENK	JOINT
SFW05AT19-1	BODY	CARCASA	GEHÄUSE	CORPS
SFW05AT20-1	SEAL	SELLO	DICHTUNG	JOINT
SFW05AT21-1	TRIGGER VALVE HEAD	ASAMBLE DE VÁLVULA	VENTIL-ZUSAMMENBAU	VALVE D'ASSEMBLÉE
SFW05AT22-1	O-RING	SELLO	DICHTUNG	JOINT
SFW05AT23-1	TRIGGER VALVE GUIDE	ASAMBLE DE VÁLVULA	VENTIL-ZUSAMMENBAU	VALVE D'ASSEMBLÉE
SFW05AT24-1	O-RING	SELLO	DICHTUNG	JOINT
SFW05AT25-1	TRIGGER VALVE STEM	ASAMBLE DE VÁLVULA	VENTIL-ZUSAMMENBAU	VALVE D'ASSEMBLÉE
SFW05AT26-1	BRACKET	SOPORTE	HALTERUNG	SUPPORT DE FIXATION
SFW05AT27-1	SPRING	RESORTE	FEDER	RESSORT
SFW05AT28-1	LOCKING WASHER	ARANDELA DE CIERRE	SICHERUNGSSCHEIBE	RONDELLE VERROUILLAGE
SFW05AT29-1	TRIGGER	GATILLO	AUSLÖSER	GÂCHETTE
SFW05AT30-1	PIN	PASADOR	STIFT	GOUPILLE
SFW05AT31-1	SCREW	TORNILLO	SCHRAUBE	VIS
SFW05AT32-1	DRIVER GUIDE	GUÍA	FÜHRUNG	GUIDE
SFW05AT33-1	SPRING PIN	RESORTE PASADOR	FEDER STIFT	RESSORT GOUPILLE
SFW05AT34-1	FRONT PLATE	PLACA	PLATTE	PLAQUE
SFW05AT35-1	FIXED MAGAZINE UNIT	ASAMBLE DE CARRIL	SCHIENE-ZUSAMMENBAU	RAIL D'ASSEMBLÉE
SFW05AT36-1	SCREW	TORNILLO	SCHRAUBE	VIS
SFW05AT37-1	STOP	TOPPE	PUFFER	ARRÊT
SFW05AT38-1	SCREW	TORNILLO	SCHRAUBE	VIS
SFW05AT39-1	MOVABLE MAGAZINE UNIT	ASAMBLE DE CARRIL	SCHIENE-ZUSAMMENBAU	RAIL D'ASSEMBLÉE
SFW05AT40-1	PIN	PASADOR	STIFT	GOUPILLE
SFW05AT41-1	WHEEL	RUEDA	RAD	ROUE
SFW05AT42-1	TENSION SPRING	MUELLE DE TENSIÓN	TENSIONSFEDER	RESSORT DE TENSION
SFW05AT43-1	FEEDER SHOE	ALIMENTADOR	NAGELSCHIEBER	POUSSOIR
SFW05AT44-1	SPRING WASHER	RESORTE ARANDELA	DICHTUNG SCHEIBE	JOINT RONDELLE
SFW05AT45-1	NUT	TUERCA	MUTTER	ÉCROU
SFW05AT46-1	SUPPORT	SOPORTE	HALTERUNG	SUPPORT DE FIXATION
SFW05AT47-1	SCREW	TORNILLO	SCHRAUBE	VIS
SFW05AT48-1	PIN	PASADOR	STIFT	GOUPILLE
SFW05AT49-1	TORSION SPRING	MUELLE DE TORSIÓN	TORSIONSFEDER	RESSORT DE TORSION
SFW05AT50-1	LOCK	TRABAR	VERRIEGELN	VERROUILLER
SFW05AT51-1	NUT	TUERCA	MUTTER	ÉCROU
SFW05AT52-1	SOFT GRIP SLEEVE	AGARRADERO	GRIFF	GAINÉ DE CUIR
SFW05AT53-1	O-RING	SELLO	DICHTUNG	JOINT
SFW05AT54-1	END CAP	TAPA	KAPPE	BOUCHON
SFW05AT55-1	AIR PLUG	AIRE ENCHUFE	LUFTSTECKER	L'AIR BOUCHON



## AT LIGHT WIRE STAPLER

Parts Reference Guide

Guía de referencia de piezas

Pièces Guide de référence

Schematic Drawings Inside  
Plano esquemático en el interior  
Schéma intérieur



Verpa Senco BV  
Pascallaan 88  
8218 NJ LELYSTAD  
The Netherlands

www.senco-emea.com

© 2014 by Senco Brands, Inc.

Rev. VS14SFWAT04\_25-06-2014

EU DESIGNED PARTS CAN BE DIFFERENT

